


## ELITE CRIB SHEET

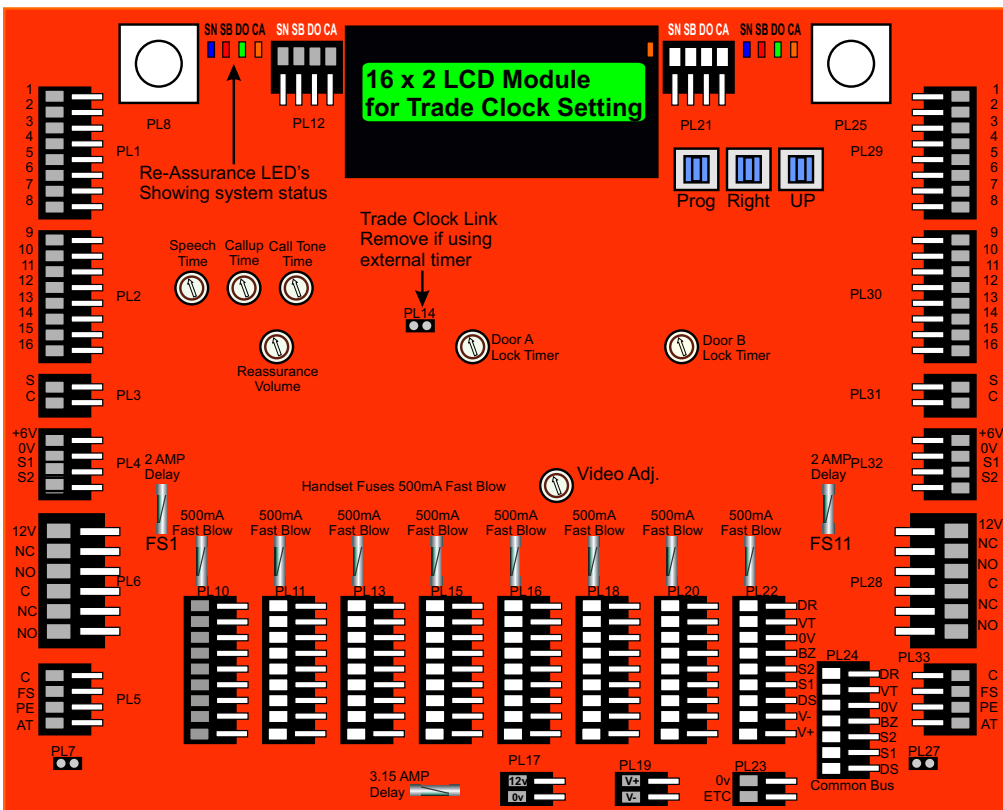

For commonly seen functions and issues with Elite systems, please consult this crib sheet before contacting our technical support team

# ELITE CRIB SHEET

CAME   
ENTROTEC

## SN: SPEAK NOW

SN: Is the Speak Now and will measure around 12V when the system is idle, when activated the measurement will be 0v. The SN LED will illuminate **Blue** when activated and at the door panel it will display **Speak Now**.

## DO: DOOR OPEN

DO: Is the Door Open and will measure around 12V when the system is idle, when activated the measurement will be 0v. The DO LED will illuminate **Green** when activated and at the door panel it will display **Door Open**.

## CA: CALL ACCEPT

CA: Is the Call Accept and will measure around 12V when the system is idle, when activated the measurement will be 0v. The CA LED will illuminate **Amber** when activated and at the door panel it will display **Calling**.

## SB: SYSTEM BUSY

SB: System Busy should measure 0v when system is idle when active should measure around 12v. The SB LED will illuminate **Red** when activated and at the door panel it will display **System Busy** (The SB is only required if the system is a dual entrance otherwise it can be omitted)

SN, SB, DO, CA Are located at the top left (**PL12**) of the board if it is a single entrance and if it is a dual entrance they are found on **PL12** and **PL21**.

If SB is on and the system only has a single entrance. **(Check 0v is connected on PL4)**

If any of the SN, DO, CA or SB are on when the system is sitting idle, remove connectors one at time until LED goes off. If any of the LEDs are still on with just power to the board, there is a fault with the Elite board.

## TRADE ISSUES

Trades issues: If system is found to be functional then trades becomes active 24hr, down power system, clear all trades times, activate the manual over ride (up button) and test if trades is working with manual over ride. **(Check that locks are suppressed with a diode)**

If Easitag is used and display shows **Searching** check **OP** from the Door panel to **PE** on **PL5**

CAME   
ENTROTEC



CAME ENTROTEC  
5 Ashwood Court  
Oakbank  
Livingston  
EH53 0TL

Tel: 01506 886230  
Support: 01506 886235

© 2022 - EN - ELITECRIB0222  
YOU MAY NOT EVEN PARTIALLY REPRODUCE THIS DOCUMENT  
CAME RESERVES THE RIGHT TO MAKE ANY CHANGES TO THIS DOCUMENT AT ANY TIME  
THE DATA AND INFORMATION SHOWN IN THIS CATALOGUE ARE SUBJECT TO CHANGE WITHOUT OBLIGATION TO GIVE PRIOR NOTICE BY CAME S.P.A. E&OE