

900

**CAME.COM/ENTROTEC** 


# **EPRO HF READER**



**INSTALLATION GUIDE** 

## **epro HFR INSTALLATION**



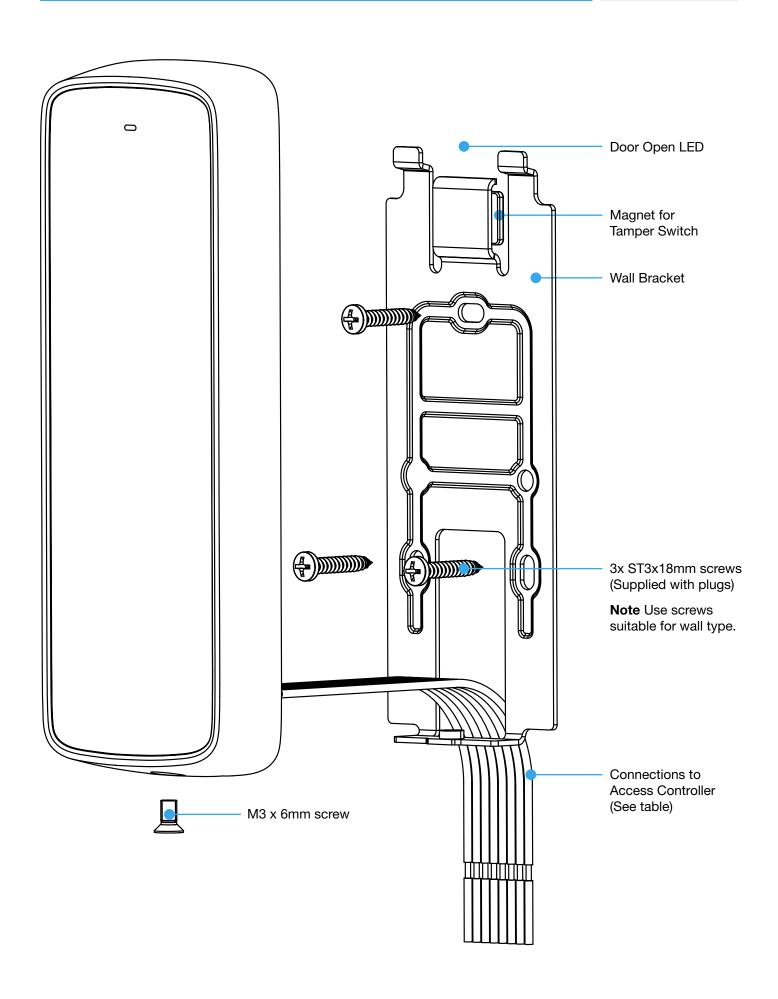

## **epro HFR INSTALLATION**



#### **ACCESS CONTROLLER CONNECTIONS**

Colour	Connection to Access Controller
Red	12V
Black	GND
Yellow	RS485- (B)
Purple	RS485+ (A)



#### **CAME ENTROTEC**

5 Ashwood Court Oakbank Livingston EH53 OTL

**Tel:** 01506 886230 **Support:** 01506 886235



© 2023 - EN - HSRINS0323
YOU MAY NOT EVEN PARTIALLY REPRODUCE THIS DOCUMENT
CAME RESERVES THE RIGHT TO MAKE ANY CHANGES TO THIS DOCUMENT AT ANY TIME
THE DATA AND INFORMATION SHOWN IN THIS CATALOGUE ARE SUBJECT TO CHANGE WITHOUT OBLIGATION TO GIVE PRIOR NOTICE BY CAME S.P.A, E&OE

