

YOUR VOGUE VIDEO HANDSET USER GUIDE

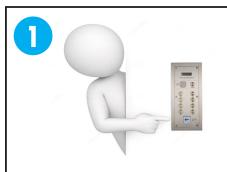

The visitor presses the button for your flat number or dials your number on the main entrance panel



Your video handset will ring and the video monitor will display an image of the caller. If the call is not answered the system will reset to allow other calls.

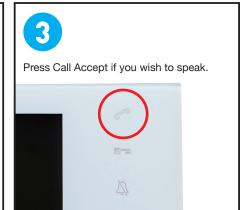







If you press the "unlock" button the main entrance panel will beep. Your visitor can now enter.



Please ask your visitor to ensure the door closes behind them. Press the handset button to end the call.

- 1. Call Accept. The videomonitor will display for the length of the call. Press again to end the call.
- 2. Unlock. This will allow the visitor to enter.
- 3. Privacy. Press this to silence the call.
- 4. Concirge Button (CB) / Call Back / Camera Switch Button (if applicable)
- 5. Adjust the loudspeaker volume with +/-
- 6. To alter the ringtone, press +/- to start the ringer, then press CB to select the ringtone options and +/- to set the volume.



If you do not want to be disturbed press the "privacy" button once. The red light will come on. Please note: you will not receive any calls for 8 hours when the red light is on. If you wish to receive calls before the 8 hour time-out press the "privacy" button again and the red light will go off.





Remember: it is up to you to control who comes into the building. Only let people in if you are sure of their identity. If you do not wish to speak or let them in simply replace the handset.



For your entry into the building place your token to the reader and open the door.



For your exit from the building push the exit button and open the door.



CAME ENTROTEC

5 Ashwood Court 0akbank Livingston EH53 OTL

Tel: 01506 886230 Support: 01506 886235