204 · 44,5 · 190

A

B

C

D

E

GENERAL PRECAUTIONS

Read the instructions carefully before beginning the installation and carry out the procedures as specified by the manufacturer. • Installation, programming, commissioning and maintenance must only be carried out by qualified, expert technicians and in full compliance with the applicable law. • Before carrying out any cleaning or maintenance, disconnect the device from the power supply. • Only use this product for its intended purpose. Any other use is hazardous. • Came S.p.A. is not liable for any damage caused by improper, erroneous or unreasonable use. • Do not obstruct the ventilation or heat dissipation vents or slots.

This product complies with the applicable standards in force at the time of manufacturing.
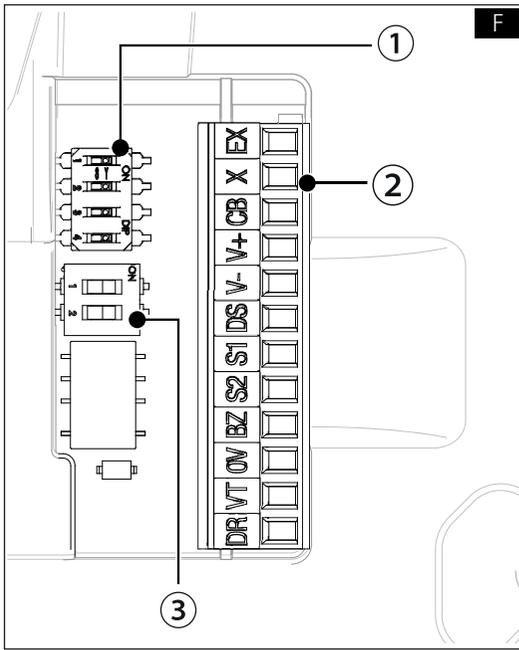
DESCRIPTION

Video intercom with handset.

📖 AGT V ENT BF contains an audio-frequency induction loop compatible with T hearing aids.

Technical data

Type	AGT V ENT EV5 - AGT V ENT EV5 BF
Volume	74dB SPL Max (at 0,5m)
IP protection rating	30
Operating temperature (°C)	+5: +40
Storage Temperature (°C)	-25: +70
Operating Voltage	12-15VDC (13.8V Nominal)
Power	0,15W Idle, 2,5W Active
Connections	12 Way Pluggable Screw Terminals
Dimensions (WxHxD)	204 x 190 x 44,5mm
Display	5" TFT LCD 480x272
Viewing Angle	L-70°, R-70°, U-50°C, D-70°

INSTALLATION

A Press the small plastic tab and slide the device off the wall-mounting support to remove it.

⚠ Observe the TOP arrow.

B Fasten the wall-mounting support to the back box.

📖 Avoid overtightening the screws.

C Make the connections.

D Refit the device to the wall-mounting support.

📖 To unhook the device, use a screwdriver to press in the plastic tab and slide the device upwards. **E**
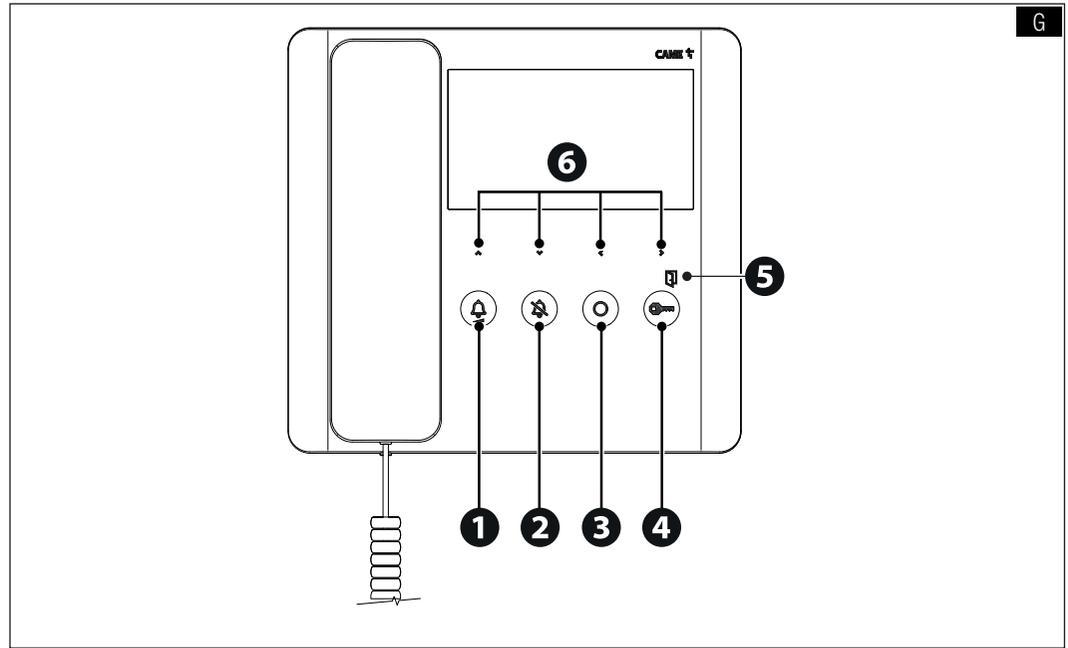
F

HANDSET CONNECTION

▣ Control board

① Timer switch

Switches SW2.1, SW2.2, SW2.3 select the privacy function options. Privacy can be: disabled completely, set to latch on/off or set to time out after a preset time (see table below).

SW2.1	SW2.2	SW2.3	SW2.4	Meaning
ON	ON	ON		On/Off (latching - no timeout)
ON	ON	OFF		Disabled
ON	OFF	ON		5 minute timeout
ON	OFF	OFF		30 minute timeout
OFF	ON	ON		1 hour timeout
OFF	ON	OFF		4 hour timeout
OFF	OFF	ON		8 hour timeout
OFF	OFF	OFF		12 hour timeout

② Terminal block

Preferred colour coding for wiring handsets		Function
DR	White/Blue	Door release
VT	Blue	12VDC input
0V	White/Orange	Common
BZ	Orange	Ringtone signal
S2	White/Green	Audio from handset mic.
S1	Green	Audio to handset spk.
DS	-	Door status LED
V-	White/Brown	Video/Data -
V+	Brown	Video/Data +
CB	-	Call back
X	-	Alarm out
EX	-	External sounder

③ Termination switch

SW1.1= Data termination switch, should be ON for normal use.
SW1.2= Video termination switch, should be ON for normal use.

USER INSTRUCTIONS

G

General notes

The intercom system is designed so that you have a limited time to answer a call and allow the visitor access or not. After this time, the system will reset for the next visitor.

▣ Button functions

❶ Ringer volume setting (low/medium/maximum volume)
❷ Privacy button
❸ CB button
❹ Unlockbutton
❺ Door open LED
❻ OSD menu browsing buttons

When someone calls

Lift the receiver to answer an incoming call.

While on a call

To allow the visitor access, press ❹ Unlock. Replace the receiver to complete the call.

Silence a call

Press ❷ the Privacy button, or adjust ❶ the Ringer volume.

Keeping things quiet

If you do not wish to be disturbed, press ❷ the Privacy button. The red LED will illuminate and the ringer is silenced. Press the button again to turn the ringer back on.

CB button

Multi-function button - Concierge button / Call back if applicable.