



GENERAL PRECAUTIONS

Read the instructions carefully before beginning the installation and carry out the procedures as specified by the manufacturer.

- Installation, programming, commissioning and maintenance must only be carried out by qualified, expert technicians and in full compliance with the applicable law.
- Before carrying out any cleaning or maintenance, disconnect the device from the power supply.
- Only use this product for its intended purpose. Any other use is hazardous.
- Came S.p.A. is not liable for any damage caused by improper, erroneous or unreasonable use.
- Do not obstruct the ventilation or heat dissipation vents or slots. This product complies with the applicable standards in force at the time of manufacturing.

DESCRIPTION




Hands-free intercom video receiver.


 PLX V ENT BF contains an audio-frequency induction loop compatible with T hearing aids. 

Technical data

Type	PLX V ENT EV6 - PLX V ENT EV6 BF
Volume	79dB SPL Max (at 0,5m)
IP protection rating	30
Operating temperature (°C)	+5: +40
Storage Temperature (°C)	-25: +70
Operating Voltage	12-15VDC (13.8V Nominal)
Power	0,15W Idle, 2,5W Active
Connections	12 Way Pluggable Screw Terminals
Display	5" TFT LCD 480x272
Viewing Angle	L-70°, R-70°, U-50°C, D-70°

INSTALLATION

- A** Press the small plastic tab and slide the device off the wall-mounting support to remove it.
-  Observe the TOP arrow.
- B** Fasten the wall-mounting support to the back box.
-  Avoid overtightening the screws.
- C** Make the connections.
- D** Refit the device to the wall-mounting support.
-  To unhook the device, use a screwdriver to press in the plastic tab and slide the device upwards. **E**

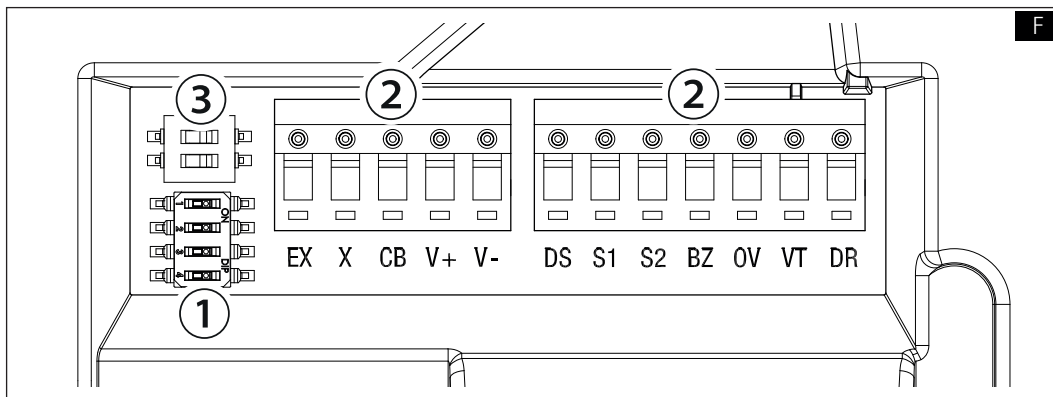

F

HANDSET CONNECTION

F Control board

① Timer switch

Switches SW2.1, SW2.2, SW2.3 select the privacy function options. Privacy can be: disabled completely, set to latch on/off or set to time out after a preset time (see table below).

SW2.1	SW2.2	SW2.3	SW2.4	Meaning
ON	ON	ON		On/Off (latching - no timeout)
ON	ON	OFF		Disabled
ON	OFF	ON		5 minute timeout
ON	OFF	OFF		30 minute timeout
OFF	ON	ON		1 hour timeout
OFF	ON	OFF		4 hour timeout
OFF	OFF	ON		8 hour timeout
OFF	OFF	OFF		12 hour timeout

② Terminal block


Preferred colour coding for wiring handsets	Function
DR	White/Blue
VT	Blue
OV	White/Orange
BZ	Orange
S2	White/Green
S1	Green
DS	-
V-	White/Brown
V+	Brown
CB	-
X	-
EX	-

③ Termination switch

SW1.1= Data termination switch, should be ON for normal use.

SW1.2= Video termination switch, should be ON for normal use.

USER INSTRUCTIONS

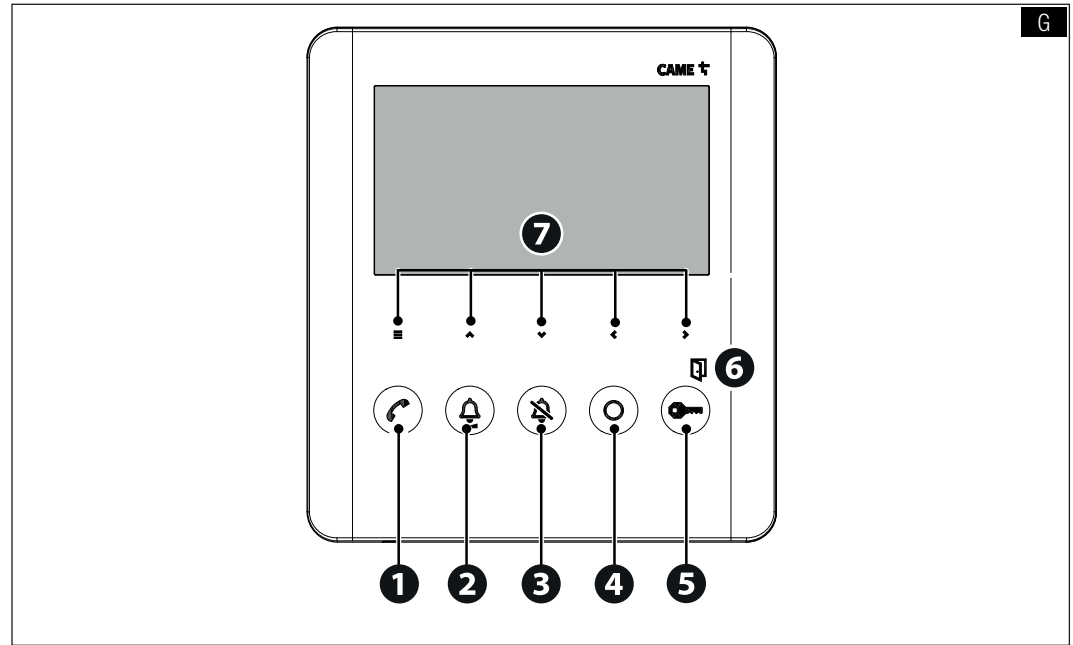

G

General notes

The intercom system is designed so that you have a limited time to answer a call and allow the visitor access or not. After this time, the system will reset for the next visitor.

G Button functions

- ① Call accept / end
- ② Ringer volume setting (low/medium/maximum volume)
- ③ Privacy button
- ④ CB button
- ⑤ Unlockbutton
- ⑥ Door open LED
- ⑦ OSD menu browsing buttons

When someone calls

Press the ① Call accept / end button to answer an incoming call. The video monitor will display for the length of the call.

While on a call

To allow the visitor access, press the ⑤ Unlock button. Press the ① Call accept / end button to complete the call.

Silence a call

Press the ③ Privacy button, or adjust the ② Ringer volume.

Keeping things quiet

If you do not wish to be disturbed, press ③ the Privacy button. The red LED will illuminate and the ringer is silenced. Press the button again to turn the ringer back on.

CB button

Multi-function button - Concierge button / Call back if applicable.